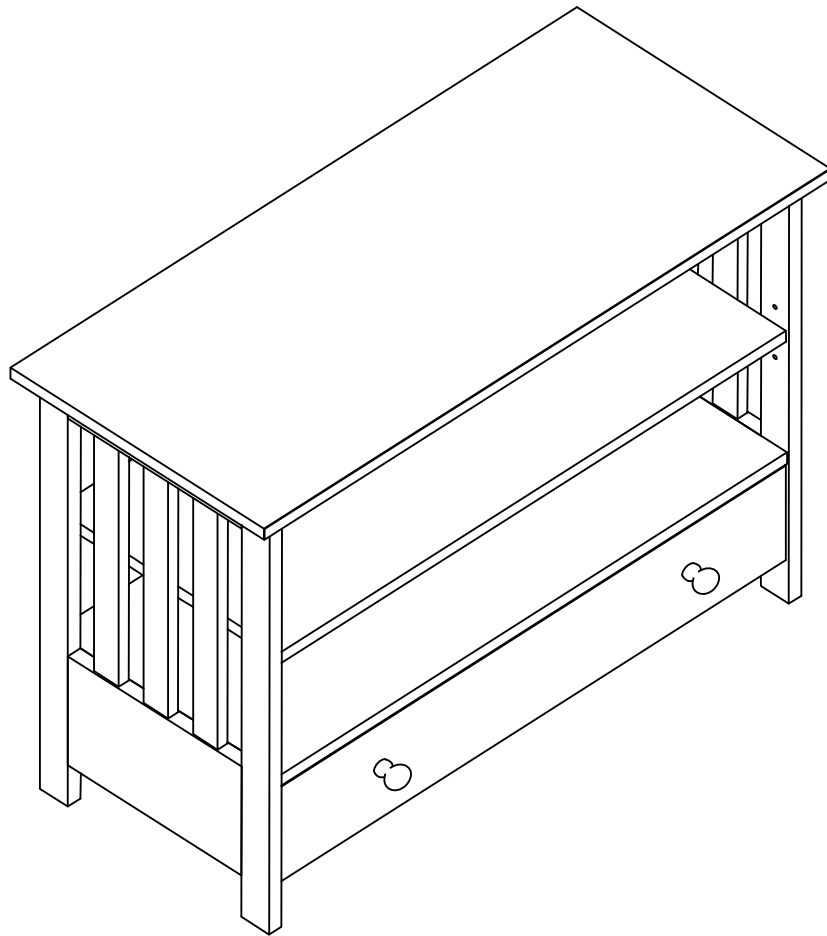 


ASSEMBLY INSTRUCTIONS



Description : MISSION ENTERTAINMENT STAND
Item No. : TV-36

BEFORE ASSEMBLY

Thank you for purchasing this quality product. This product has been designed for easy assembly and constructed for durability. All parts were checked prior to packaging to insure quality. Prior to beginning assembly, however, make sure all parts and hardware are included and free of obvious defect. If a part is missing or defective, please contact the store where purchased. If hardware is missing, or you need help with assembly, please call toll free 888-944-8396.

IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

WARNING:

Long exposure to rubber or soft plastic may cause a chemical reaction and damage the finish of your product. Protect the surface of the product with cloth if you are using any product with rubber feet or base.

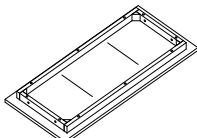 
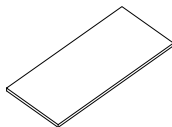 
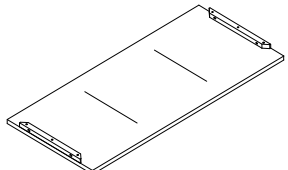 
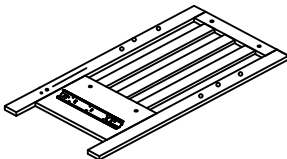 
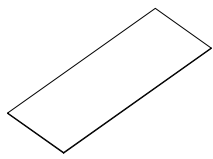 
 
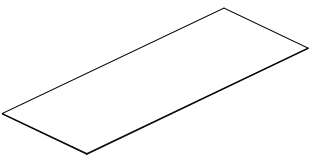 
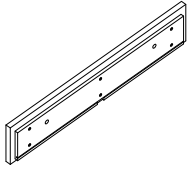 
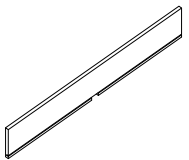 
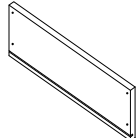 
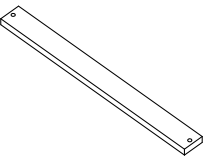 
ASSEMBLY TOOLS REQUIRED

NOT INCLUDED















PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	TOP	1		B	SHELF	1	
C	BOTTOM SHELF	1		D	SIDE FRAME (L&R)	2	
E	DRAWER BOTTOM PANEL	1		F	BOTTOM SUPPORT RAIL	1	
G	BACK PANEL	1		H	DRAWER FRONT (L&R)	1	
I	DRAWER BACK PANEL	1		J	DRAWER SIDE PANEL (L&R)	2	
K	DRAWER - SUPPORT BAR	1					


HARDWARE LIST

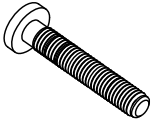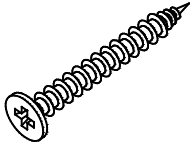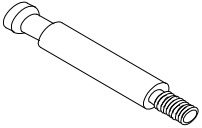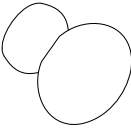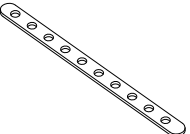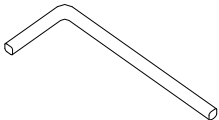            When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

No	Description	Qty	Sketch	No	Description	Qty	Sketch
1	BOLT (M6x35mm)	8		2	FLAT WASHER (Φ6.5x19mm)	8	
3	SPRING WASHER (Φ6.5x11mm)	8		4	LONG SCREW (M4x30mm)	11	
5	SHORT SCREW (M3.5x15mm)	6		6	SHELF SUPPORT PIN	4	
7	CAMBOLT	2		8	CAMLOCK	2	
9	KNOB	2		10	PAN HEAD SCREW (M3.5x35mm)	2	
11	STEEL BAND	1		12	Warning label	1	<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: auto;"> <p>WARNING! THIS ITEM IS PRONE TO TIPPING. USE ANTI-TIPPING HARDWARE (PROVIDED) TO SECURE TO THE WALL. DO NOT ALLOW CHILDREN TO CLIMB ON FURNITURE. PLACE HEAVIEST OBJECTS IN LOWER DRAWERS. DO NOT OPEN MORE THAN ONE DRAWER ON THE UNIT AT THE SAME TIME.</p> </div>
13	ALLEN KEY (4x80mm)	1					


STEP 1

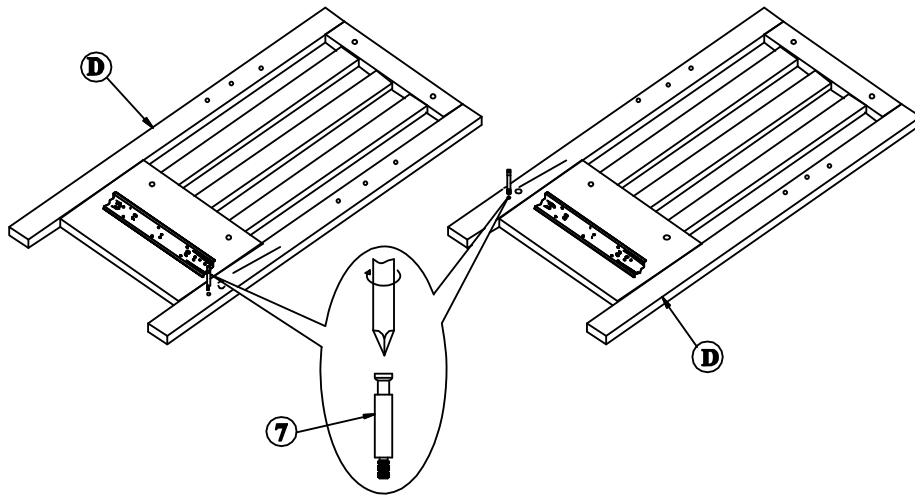 Attach the Cambolt (7) to the side frames (D) as shown below. Tighten with a screwdriver.



STEP 2

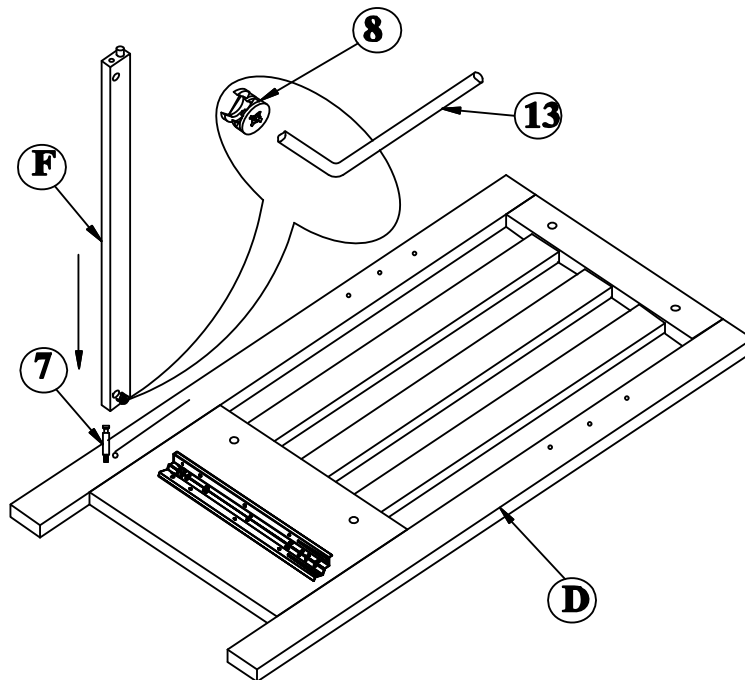 
Attach the support rail (F) to the side frames (D) with the camlock (8). Tighten with Allen key (13).



STEP 3

Attach the bottom self (C) to the side frames (D) with bolts (1), and washers (2) and (3). Tighten with Allen key (13).

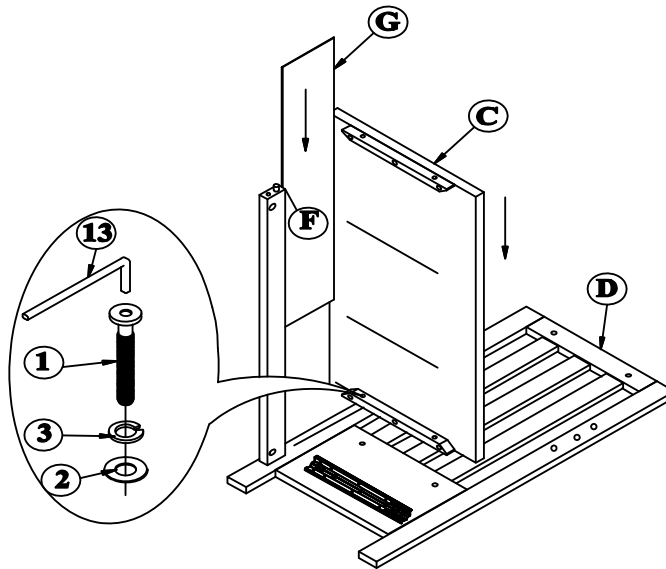 
Slide the back panel (G) into the grooves as shown below.



STEP 4


Attach the bottom self (C) to the side frames (D) with bolts (1), and washers (2) and (3). Tighten with Allen key (13).

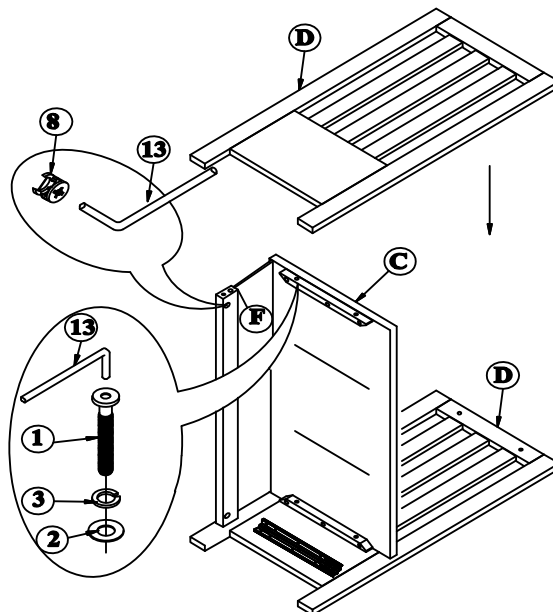 Attach the support rail (F) to the side frames (D) with the camlock (8). Tighten with Allen key (13).




STEP 5

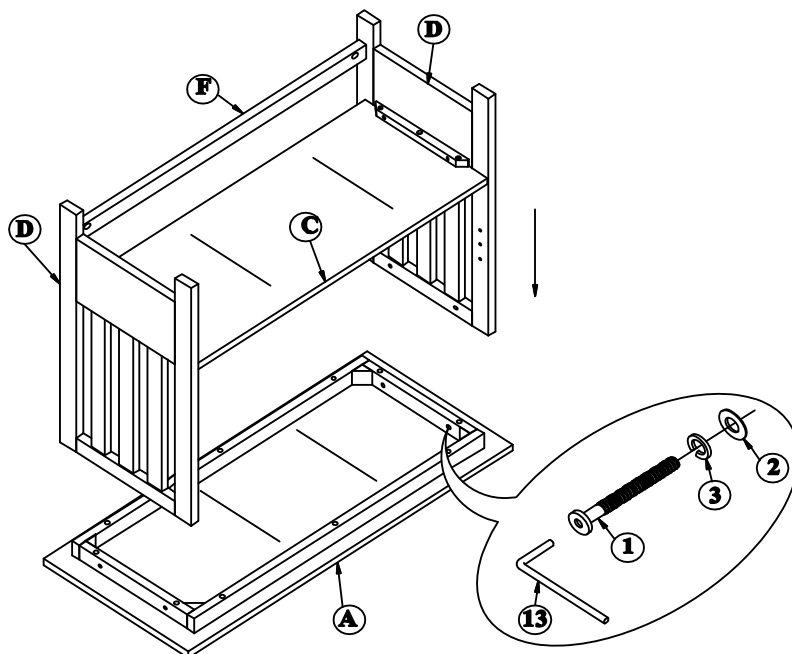 Attach Top (A) to the unit with bolts (1), and washers (2) and (3) as shown below. Tighten with Allen key (13).




STEP 6

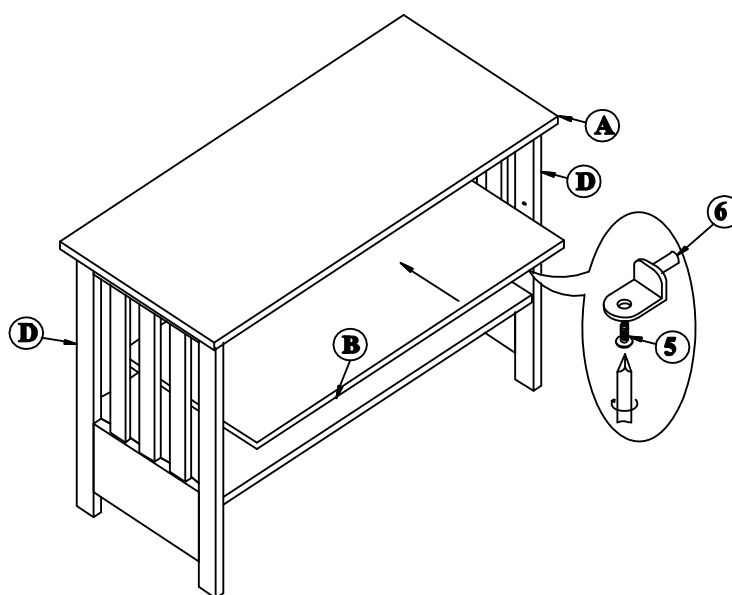 Insert shelf support pins (6) into the side frames (D). Place the shelf (B) on the shelf support pin and attach with screws (5) as shown below. Tighten with a screwdriver.




STEP 7

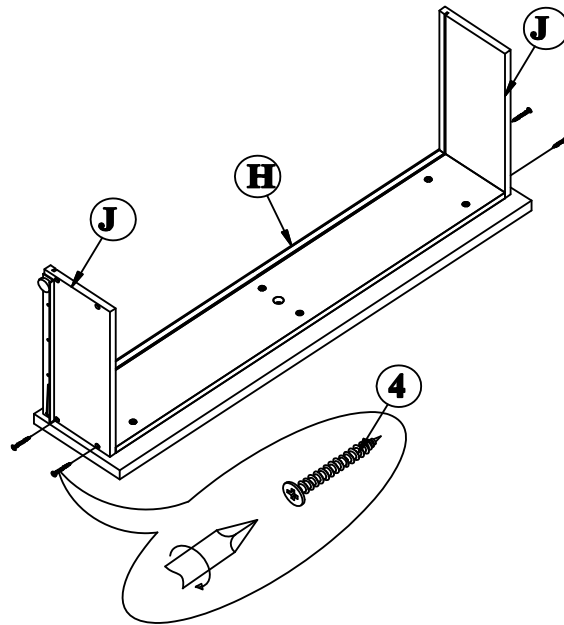 Attach drawer sides (J) to the drawer front (H) with screws (4) as shown below. Tighten with a screwdriver.




STEP 8

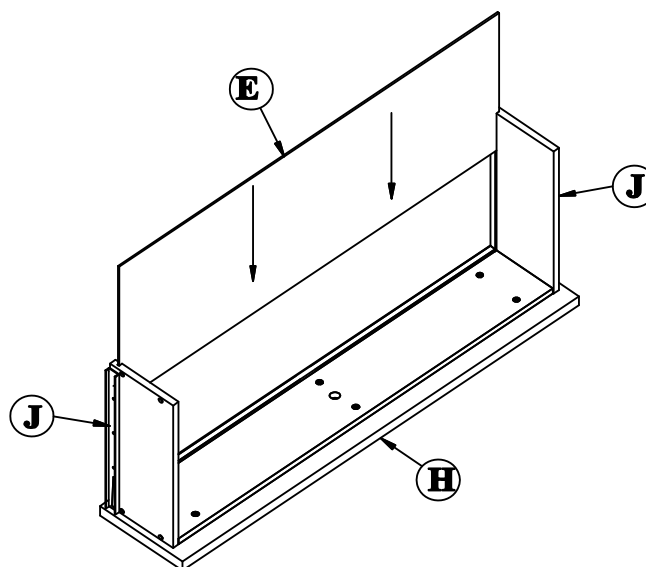 Slide the drawer bottom panel (E) into the grooves as shown below.




STEP 9

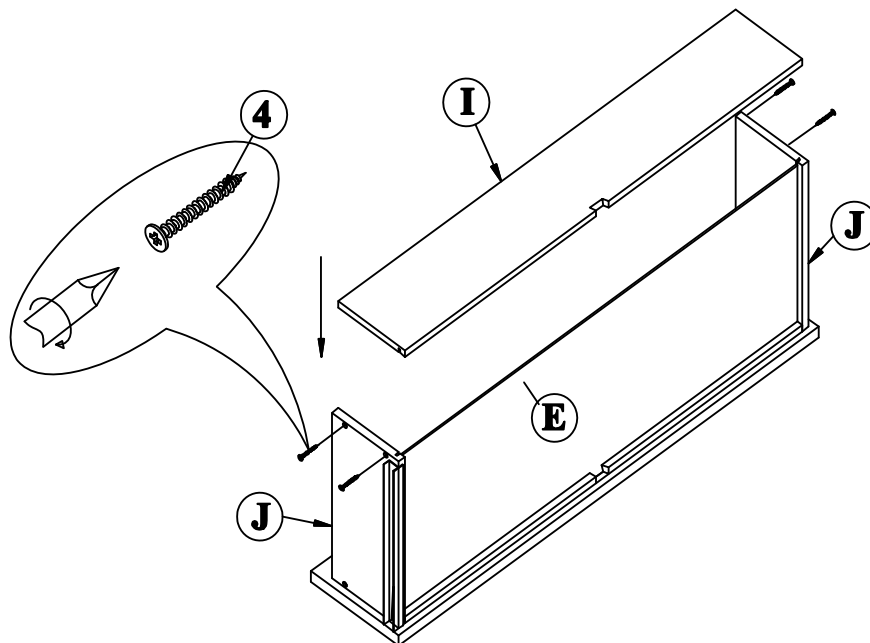 Attach the drawer back panel (I) to the drawer (from step 8) with screws (4) as shown below. Tighten with a screwdriver.




STEP 10

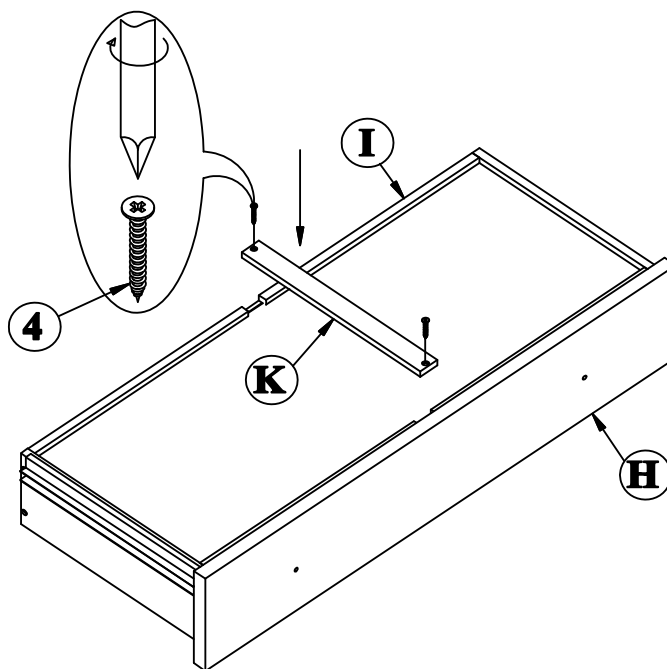 Attach the drawer support bar (K) underneath the drawer with screws (4) as shown below. Tighten with a screwdriver.



STEP 11

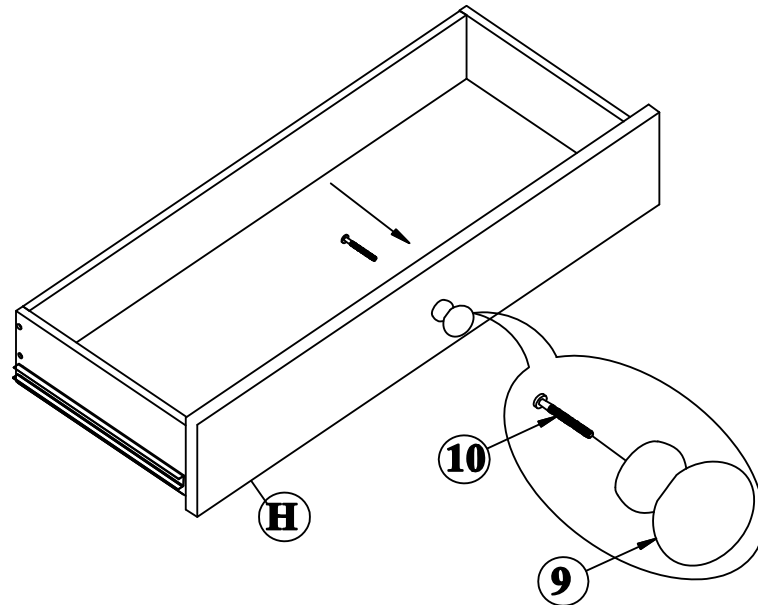 Attach the knobs (9) to the drawer front with screws (10). Tighten with a screwdriver.



STEP 12

Insert the drawer into the unit. Stick the warning label (12) into the drawer before use. Attach steel bands (11) to the unit with screws (5). Then attach the steel band to a wall with screw (4) as shown below (to secure the product and prevent tipping). Tighten with a screwdriver.

